
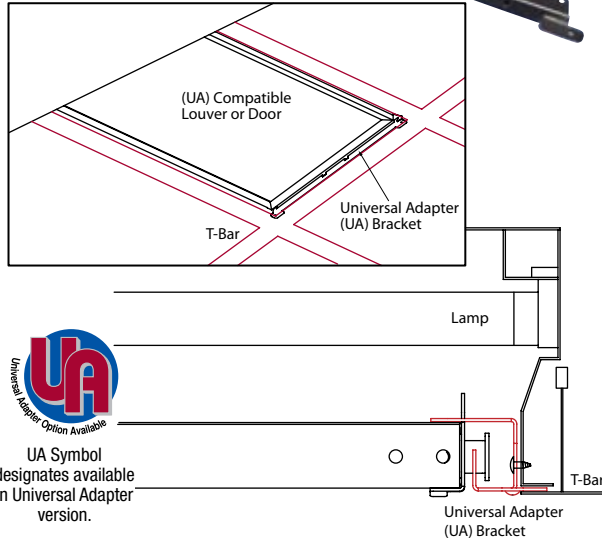


# Kwik Change™ Universal Adapter and Doorframe

## The Ultimate Solution for Fast Louver and Lens Replacement

Patent Pending

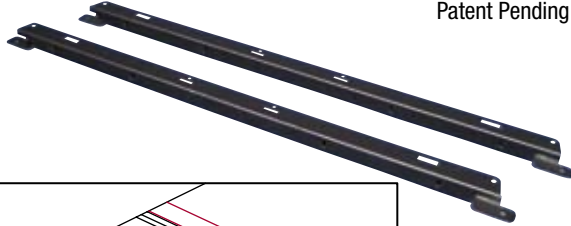

UA Symbol designates available in Universal Adapter version.

### No Measuring No Cutting or Special Orders

### No Need to Lift the Fixture

- Adapter brackets install without moving the existing fixture housing
- No disruption of ceiling tile, earthquake wires or asbestos insulation
- It does not get much faster

### Get the Facts

- Many A.L.P. louvers and RDI products available in optional Universal Adapter (UA) version.
- UA configuration suitable for use only with mating products with Universal Adapter (UA) designation.
- For use with 15/16 t-bar systems. For other application please consult factory.

### Easy to Install without any special notching or custom installation.

#### STEP 1:

Insert UA bracket between T-Bar and Fixture. Secure with self tapping screw.



#### STEP 2:

Hang Louver, RDI or Lens frame by sliding into the track created in the Universal Adapter Bracket.



#### STEP 3:

Slide louver to one end and swing up into closed position. Secure with cam latch.



### UA Steel Door Frame Kits\*

Part No.	Description
UADOOR22-BB	UA DF 2x2 kit with black bracket and screw
UADOOR24-BB	UA DF 2x4 kit with black bracket and screw
UADOOR22-BW	UA DF 2x2 kit with white bracket and screw
UADOOR24-BW	UA DF 2x4 kit with white bracket and screw

\*Lens or louvers additional